


Tri-weave Craftool® Stamp How-To BY TONY LAIER

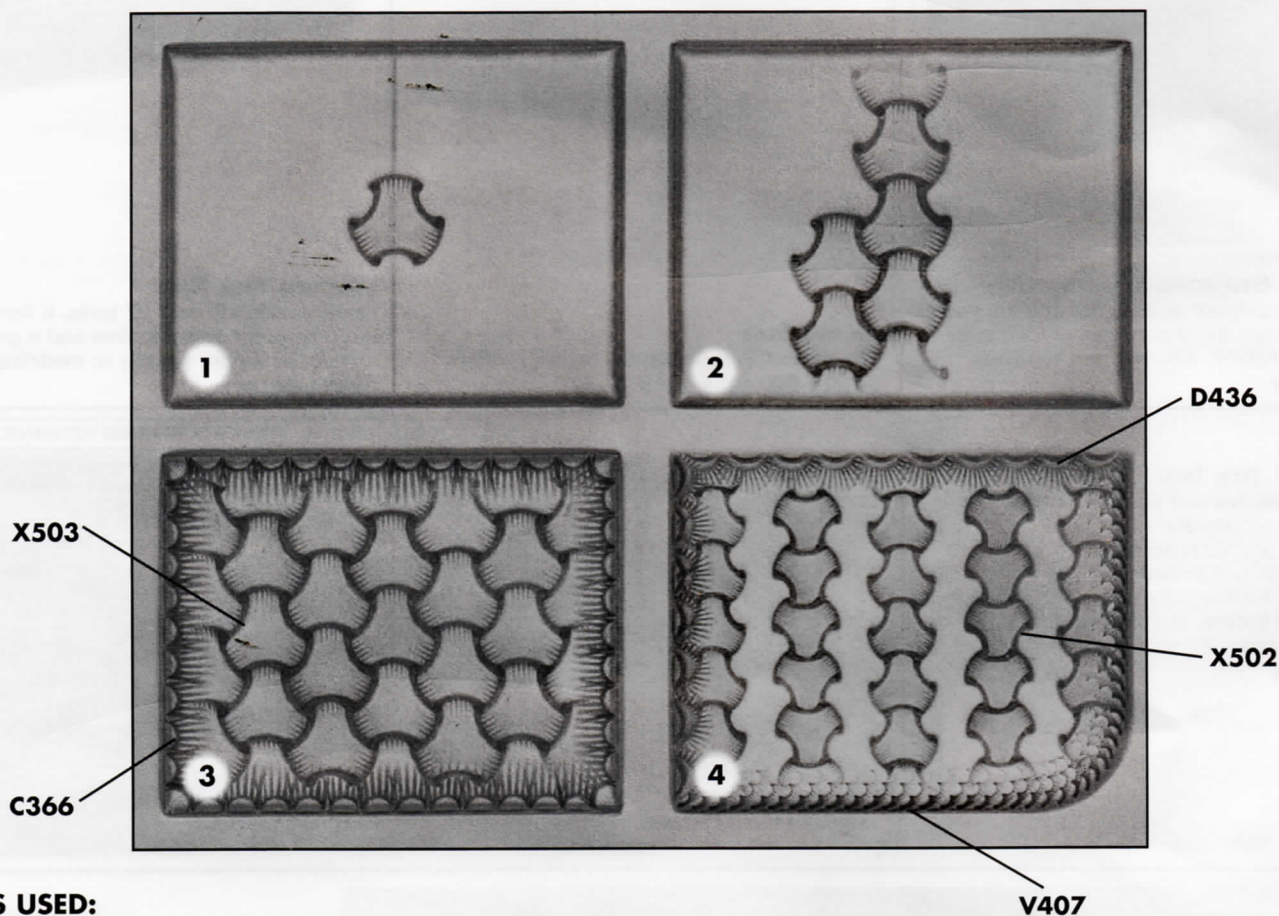

TOOLS USED:

- Ruler & Modeling Tool for Guideline
- Swivel Knife & Craftool® Beveler B197 for Border Lines
- Craftool® Stamps X502, X503, C366, D436 and V407

STEP 1: Scribe a very light guideline inside areas defined by cut and beveled border lines. Guideline may be vertical (as shown), horizontal or diagonal. Stamp first impression (X503 shown) in center of guideline.

STEP 2: Stamp impressions along guideline above and below first impression. Tilt tool for a partial impression at border lines. Begin to fill in areas on each side of stamped guideline (as shown).

STEP 3: Fill in remaining area. Use a ruler on larger projects to make sure all impressions line up correctly. Make adjustments if necessary. Stamp border tool (C366 shown) in corners first. Then fill in between to complete.

STEP 4: Sample shows Tri-Weave (X502) used to create a different woven effect. Scribe light guidelines 1/2" apart. Stamp first impression in center of guideline. Alternate direction of each first impression (as shown). Half of sample is shown with border tool D436; other half shows a Veiner V407 used as a border tool around a corner.

